

Manual for Element Alto

version 0.1.02

Last modified 8/29/2017

© 2003 - 2017 ... Naviter d.o.o.

Table of Contents

| | |
|--|-----------|
| Foreword | 0 |
| Part I Introduction | 2 |
| 1 In the Box | 2 |
| Part II General | 4 |
| 1 Getting started | 4 |
| Keypad functions | 4 |
| Switching Element Alto on and off | 5 |
| Batteries | 5 |
| Setting a language | 6 |
| 2 Technical notes | 6 |
| Batteries | 6 |
| Maintenance | 6 |
| Reboot | 7 |
| If exposed to water | 7 |
| Warranty | 7 |
| Technical support | 7 |
| Part III Flight preparation | 9 |
| 1 Mounting | 9 |
| Cockpit mount | 10 |
| Harness mount | 11 |
| Leg mount | 12 |
| Hang glider mount | 13 |
| 2 Altimeters and altitude adjustment | 13 |
| Altimeters | 13 |
| Absolute altitude | 14 |
| Alternative altitude display | 15 |
| Relative altitude | 15 |
| Part IV Flight mode | 18 |
| 1 Overview | 18 |
| 2 List of indicators | 19 |
| 3 Audio volume | 19 |
| 4 Summary page upon landing | 20 |
| Part V Flight analysis | 23 |
| Part VI Configuration | 25 |
| 1 General settings | 25 |
| Time zone (UTC) | 25 |
| Language | 25 |
| Pilot information | 25 |

| | |
|--|-----------|
| Units of measurement | 25 |
| Key tone | 25 |
| Display contrast | 25 |
| Battery type | 25 |
| Further customisation | 25 |
| 2 Vario profiles | 26 |
| Profile types | 26 |
| Profile customisation | 26 |
| Profile reset | 28 |
| Vario integration | 29 |
| 3 Audio settings | 29 |
| Audio Frequency | 29 |
| Audio mode | 29 |
| Part VII Menu tree | 31 |
| Part VIII Technical specification | 33 |
| Part IX Troubleshooting | 35 |
| Part X Notice of non-liability | 37 |
| Part XI Limited Warranty | 39 |
| Index | 40 |

Part



1 Introduction

Element Alto version 0.1.02

Company Flytec by Naviter is dedicated to solve soaring pilot's problems and Element Alto is surely one of the result on this challenge. Mainly Element Alto is helping para-glider and hang glider pilots navigate during leisure, cross country and competition flights.

Element Alto is robust and reliable vario. For this reason it has a big screen, excellent vario and a great battery autonomy, which offers more than 250 hours of flying. You can literally take your Element Alto out of the box and just use it!

Naviter is a Slovenian based company. Our focus is on highly featured and "easy to use" software and hardware which is suitable for beginners, recreational and pro soaring pilots. What we are interested in are the needs of paraglider, hang glider and sailplane pilots worldwide.

Naviter d.o.o.
Planina 3
4000 Kranj
Slovenia
email: support@naviter.com
web: <http://www.naviter.com/>

All rights reserved by Naviter d.o.o. 2003-2017

1.1 In the Box

The Element Alto is delivered with pre-installed Element Alto software. Your Element Alto was delivered in a package with the following items:

1. Element Alto
2. Protective case
3. Getting started manual

Part



2 General


2.1 Getting started

This topic wants to cover some of the basic things you need to know about how to use your Element Alto. If this is the first time you are using Element Alto please take a few moments to read about the basics about how to use Element Alto:


- [Keypad functions](#) ⁴
- [Switching Element Alto on and off](#) ⁵
- [Batteries](#) ⁵
- [Setting a language](#) ⁶

2.1.1 Keypad functions

The following two diagrams show the functions of the keypad. The second diagram for text entry is needed for example when entering the pilot's name.

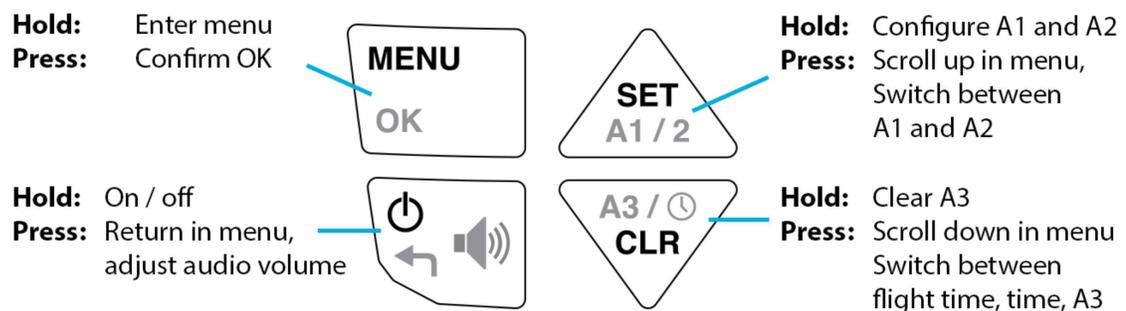

Keyboard functions.

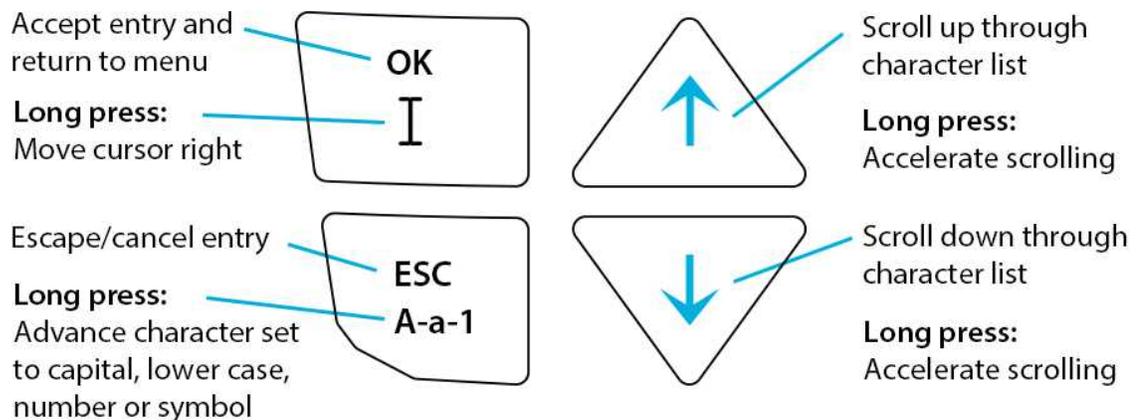

Text entry.


2.1.2 Switching Element Alto on and off

Switching on

1. Press and hold the on/off key.
2. Confirm On? with OK.
3. Cancel with ←.

Switching off

1. Press and hold the on/off key.
2. Confirm Off? with OK.
3. Cancel with ←.

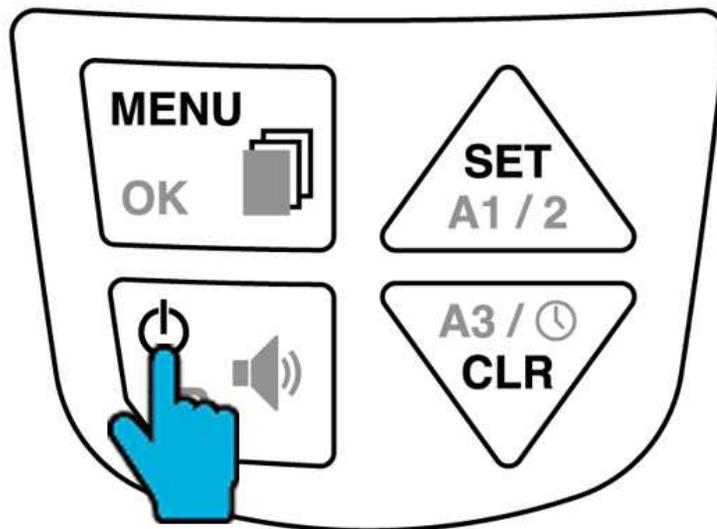

Press and hold to switch on or off.

2.1.3 Batteries

The Element Alto comes with two standard AA batteries, which are inserted on the back of the instrument. The instrument warns you, when the charge level drops below 30 %. See the [Technical notes](#) for information on re-chargeable batteries.



Battery compartment.

2.1.4 Setting a language

1. Press and hold MENU .
2. Use the arrow keys to find Settings.
3. Use the arrow keys to find Language.
4. Select your preferred language by pressing OK.

2.2 Technical notes

Taking care of your Element Alto.

2.2.1 Batteries

Your Element Alto comes with two AA alkaline batteries. Battery life in normal use should last around 250 hours. If you store your Element Alto for long periods of time, remove the batteries to prevent corrosion.

If you choose to power your Element Alto with NiMH rechargeable batteries, it is important to configure the power supply setting on the device.

1. Press and hold MENU, then use the arrow keys to scroll to Settings.
2. Press OK.
3. Use the arrows to select Battery type and press OK.
4. Select NiMH 2.1Ah using the arrow keys. Press OK.
5. Press ← to return to the Main Setup Menu.

Note: We do not recommend using NiCad rechargeable batteries in the Element.

2.2.2 Maintenance

The Element Alto is a sensitive instrument—handle it gently. Always store it in its cloth bag when not in use, and only wipe it clean with a soft, damp cloth. Never expose the Element Alto to extreme temperatures, water, or mechanical force.

2.2.3 Reboot

In the event your Element Alto locks up, you may perform a hard reboot by removing the batteries for 5 minutes before replacing them and restarting the device.

2.2.4 If exposed to water

The Element Alto is not water resistant! Exposure to water or any other liquid will cause serious damage. In case your Element gets wet, remove the batteries immediately to prevent more damage. If your Element Alto was exposed to salt water, rinse it in warm, clean, fresh water. Dry your Element Alto thoroughly and return it to your vendor or directly to Naviter for servicing.

2.2.5 Warranty

Naviter provides a 2-year warranty on your Element Alto, and we encourage you to contact us via our website any time for support. After your warranty has expired we will still repair your Element Alto at a reasonable charge.

For more details see also:

[Limited Warranty](#)^[39]

2.2.6 Technical support

Direct all inquiries to your vendor, or directly to Naviter via our website www.naviter.com or via e-mail on support@naviter.com.

If you need access to your serial number (S/N) or software version follow these steps:

1. Press and hold MENU.
2. Use the arrow keys to scroll to Device, press OK.
3. Use the arrow keys to scroll to About, press OK.

Part



3 Flight preparation


- [Mounting](#)^[9]: See how to mount your Element Alto in various ways
- [Vario profiles](#)^[26]: Element Alto offers 5 profiles for weak, regular, and strong thermals, for ridge/coastal soaring, and for balloon flights.
- [Altimeters and altitude adjustment](#)^[13]: Altimeters and their adjustments before your take-off

3.1 Mounting


Four different types of mounting your Element Alto:

- [Cockpit mount](#)^[10]
- [Harness mount](#)^[11]
- [Leg mount](#)^[12]
- [Hang glider mount](#)^[13]

3.1.1 Cockpit mount

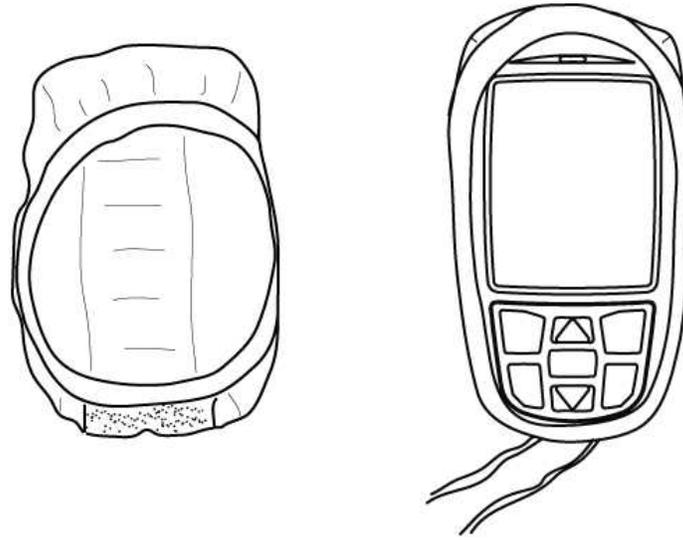


Insert the Element into the vario pocket, attach your cockpit and secure the Element's lanyard to the cockpit

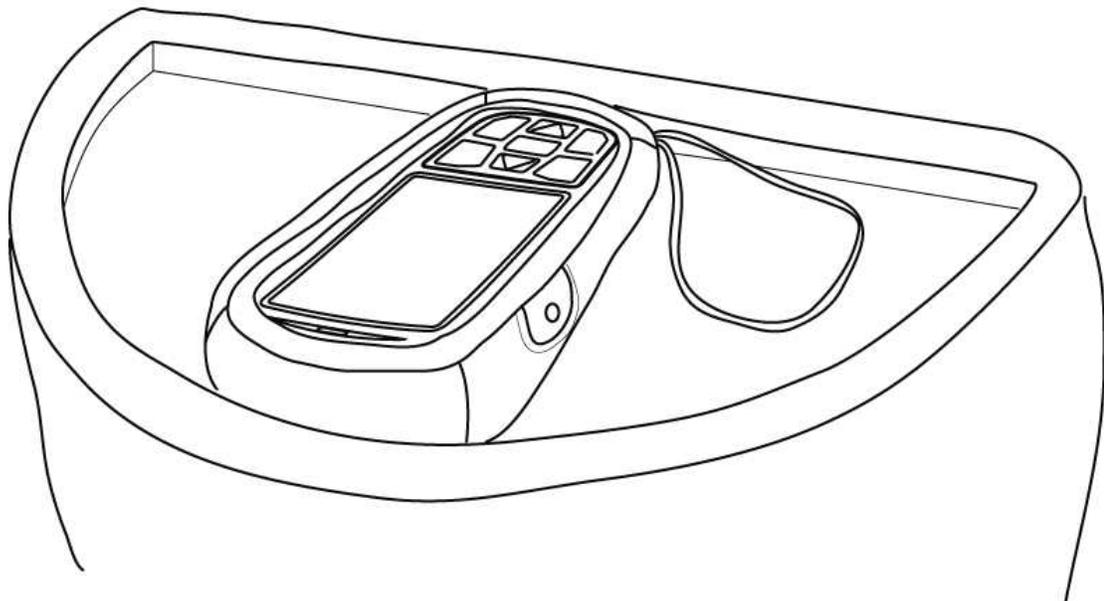


Cockpit mount.

3.1.2 Harness mount

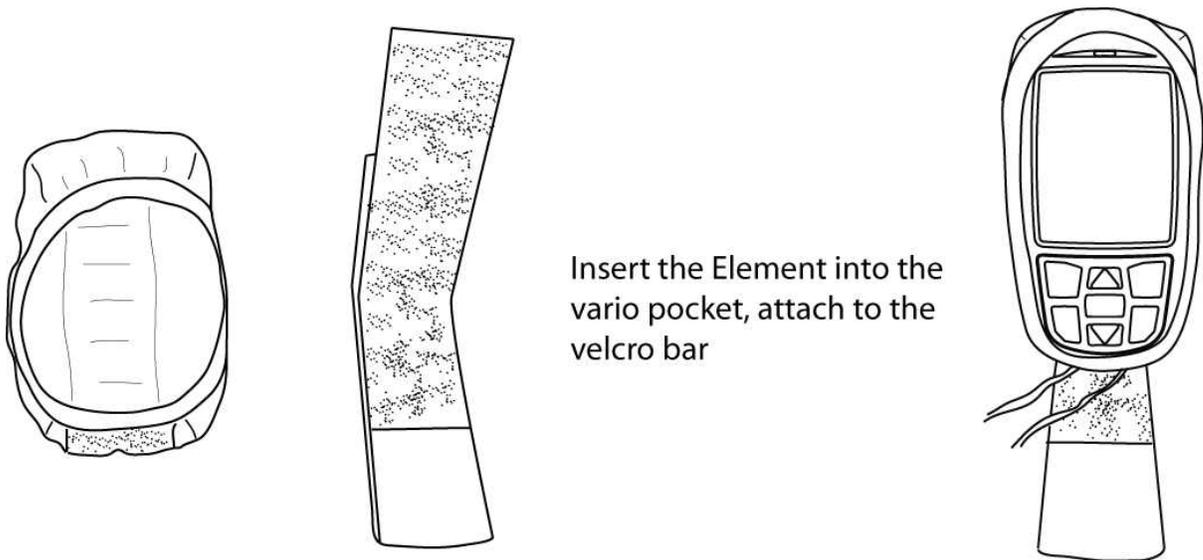

Attach the velcro bar to your harness and secure the Element's lanyard to harness or velcro bar



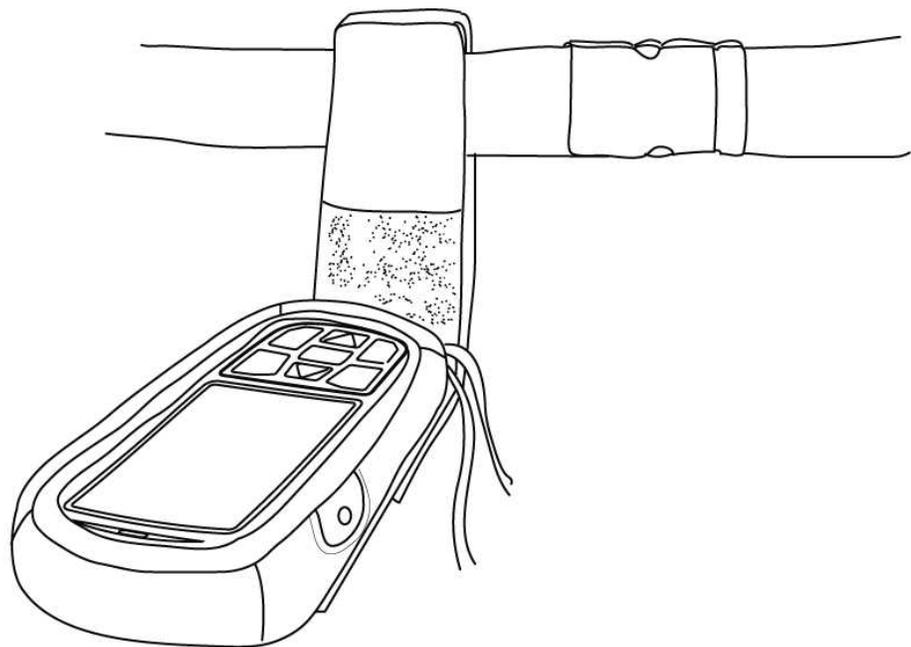


Harness mount.

3.1.3 Leg mount


Front: insert rubber washer

Back: insert screw, attach to back of Element

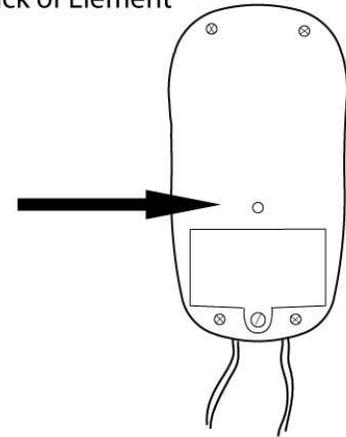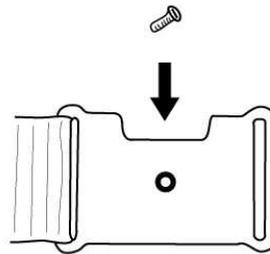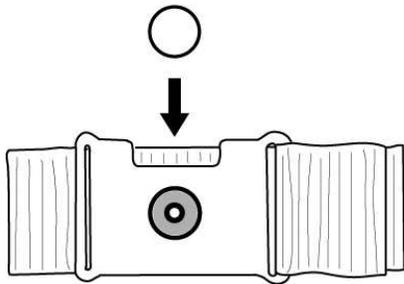


Attach strap to leg

Fix Element's lanyard to harness

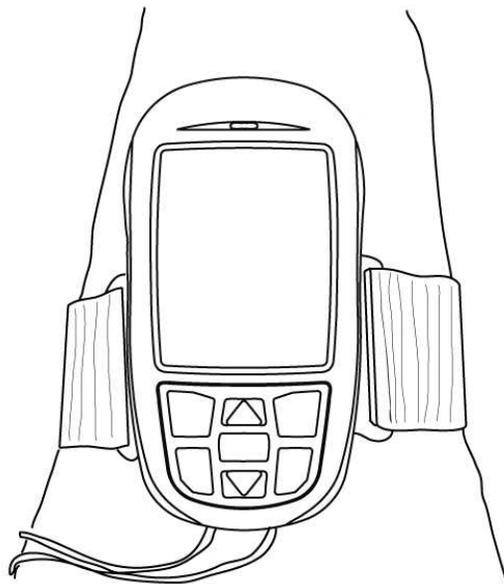


Leg mount.

3.1.4 Hang glider mount

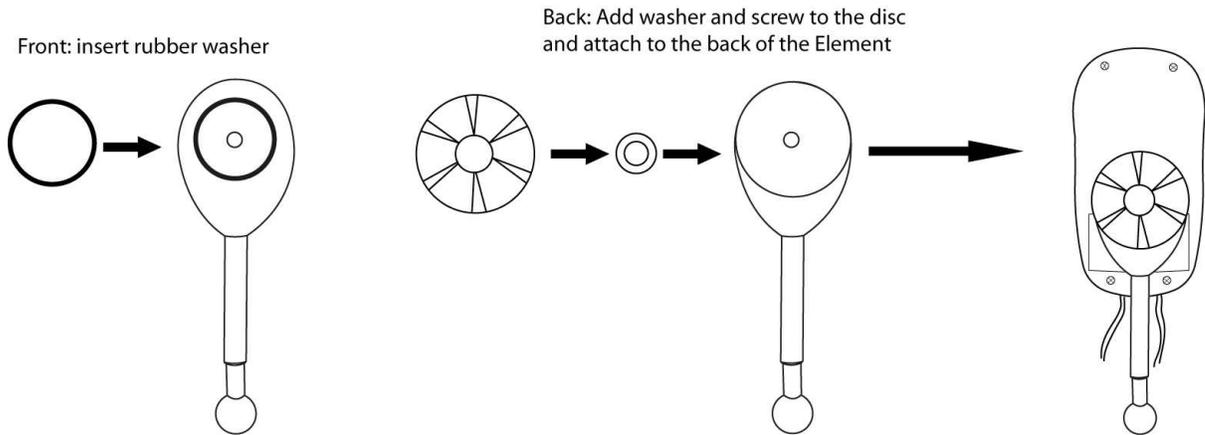

Fix mount and safety lanyard to the control bar

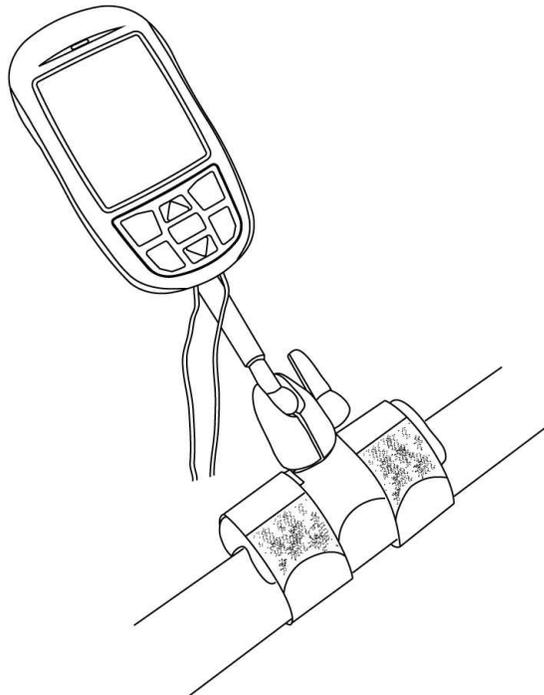

Hang glider mount.

3.2 Altimeters and altitude adjustment

Check the following chapters concerning altitude adjustment:

- [Altimeters](#)^[13]
- [Absolute altitude](#)^[14]
- [Alternative altitude display](#)^[15]
- [Relative altitude](#)^[15]

3.2.1 Altimeters


As any pilot knows, there are many different altitudes in aviation. The Element Alto determines altitude using barometric pressure, and its altitude display is customisable. You can select among three

altimeters called ALT1, ALT2, and ALT3, and you can manually set the sea level barometric pressure. We will use the following definitions when explaining the altimeter functions:

- *Absolute altitude* – height above mean sea level (MSL)
- *Relative altitude* – height above a known point such as an airfield
- *AGL Altitude* – height over the terrain directly below (above ground level)
- *QNH* – the actual air pressure at sea level
- *Flight Level* – altitude MSL, in hundred feet intervals, relative to the ISA pressure setting of 1013.25 hPa. FL17, for example, indicates that you are in the 1700' band, between 1650' and 1750' MSL

3.2.2 Absolute altitude

ALT1 is your altitude above Mean Sea Level (MSL). Toggle between displaying ALT1 and ALT2 by pressing A1 / 2.

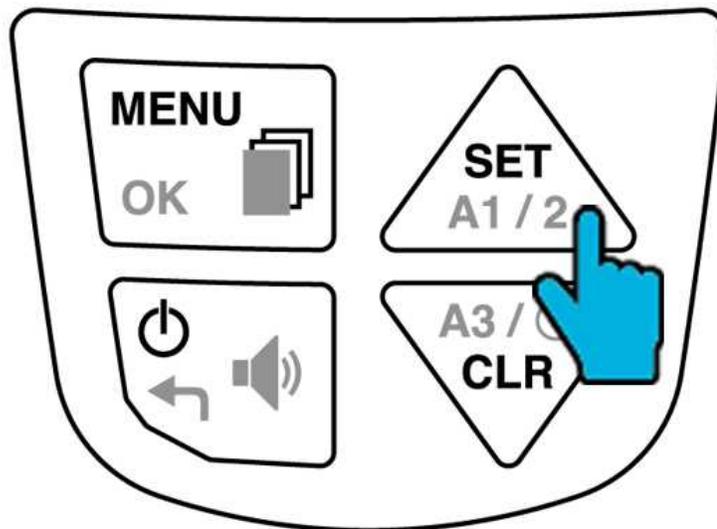

Long press to access ALT1 adjustments, short press to toggle between ALT1 and ALT2.

Adjusting altitude or pressure:

In order to adjust ALT1, make sure you have selected it to be displayed by pressing the A1 / 2 key.

1. Press and hold SET
 2. Use the arrow keys to adjust the ALT1 value.
 3. Confirm with OK.
- If you DO know your present altitude, but you DO NOT know your QNH setting. For instance, you notice a sign posted at the take-off giving the actual MSL elevation of the ramp. In this case, you might adjust your ALT1 to match the sign. You will notice that adjusting the altitude setting will also cause a change the QNH pressure setting.
 - If you DO NOT know your present altitude, but you DO know your barometric pressure. Perhaps you have an aviation weather report giving the local QNH setting, or perhaps you have a setting from air traffic control. In either case you can change ALT1 to reflect this pressure setting

3.2.3 Alternative altitude display

Toggle between displaying ALT1 and ALT2 by pressing A1 / 2. When ALT2 is toggled, your Element will not necessarily display the label ALT2, instead it will indicate whichever ALT2 configuration is presently selected. You can configure ALT2 to show any of four different values using the Flight Settings menu.

1. Press and hold MENU, then use the arrow keys to select Flight Settings.
2. Press OK.
3. Use the arrows to select Alt2 mode and press OK.
4. Then select your preferred ALT2 mode.
5. Press OK.
6. Press ← to return to the Main Setup Menu.

These are the four available choices for ALT2:

- *Flight Level*: (The label FL appears beside the altitude reading.) Note that you cannot adjust ALT2 when you have selected this option, because the Flight Level display is always based on a standard atmospheric pressure value of 1013.25 hPa.
- *ALT1 m/ft inverse*: (If ALT1 is displayed in metres, then ALT2 displays true altitude in feet. The label ALT1 remains beside the altitude reading but the units change.) Note that you can adjust this value. Adjusting ALT2 in this mode will automatically adjust ALT1 as well.
- *Relative altimeter*: (The label ALT2 appears beside the altitude reading. Note that you can adjust this value.

Adjusting ALT 2

Make sure you have selected ALT2 to be displayed by pressing the A1 / 2 key.

1. Press and hold SET
2. Use the arrow keys to adjust the ALT2 value.
3. Confirm with OK.

When ALT2 is in relative mode you can zero it:

1. Press and hold SET
2. In the sub-menu you have now entered, press and hold the MENU key .
3. Use the arrow keys to switch between 0.


When ALT2 is set to ALT m/ft inverse, your altitude displayed is the same, just in different units. You therefore can only adjust ALT1 as described above.

3.2.4 Relative altitude

Toggle between displaying ALT3 and the current time of day by pressing the A3 key. This altimeter always gives a relative altitude and is easy to reset to zero in flight using the Clear ALT3 (CLR) key. It has two main uses:

When your Element Alto detects take-off, it automatically sets ALT3 to zero. In this way, ALT3 will indicate your height above (or below) the launch.

In flight, reset ALT3 to zero at any time by pressing CLR A3. This can be useful to monitor your height gain in a weak thermal.

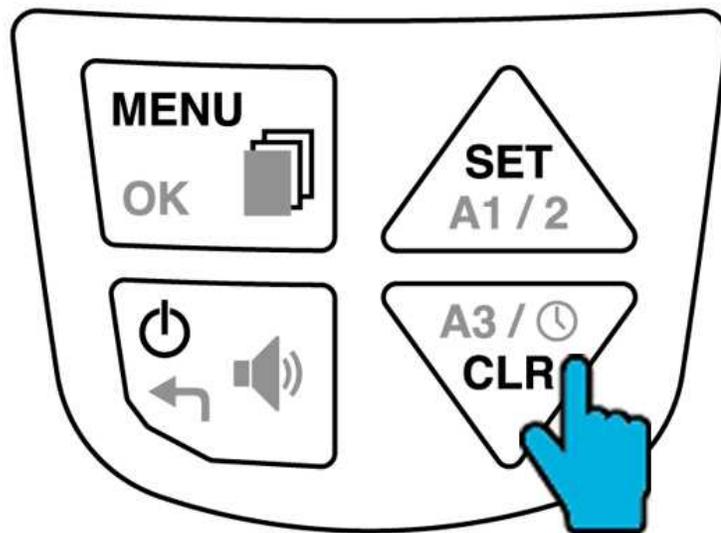

Toggle between Alt 3, time and flight time, long press to clear Alt 3.

Part




4 Flight mode

Your flight screen and flight information on the Element Alto:

- [Overview](#)^[18]
- [List of indicators](#)^[19]
- [Audio volume](#)^[19]
- [Summary page upon landing](#)^[20]

4.1 Overview

Here we show you what you see on your screen during flight. In order to configure any of these indicators, follow these links: [Altimeters and altitude adjustment](#)^[13], [Vario profiles](#)^[26] which cover all of your acoustic settings as well and [General settings](#)^[25], such as time and units.

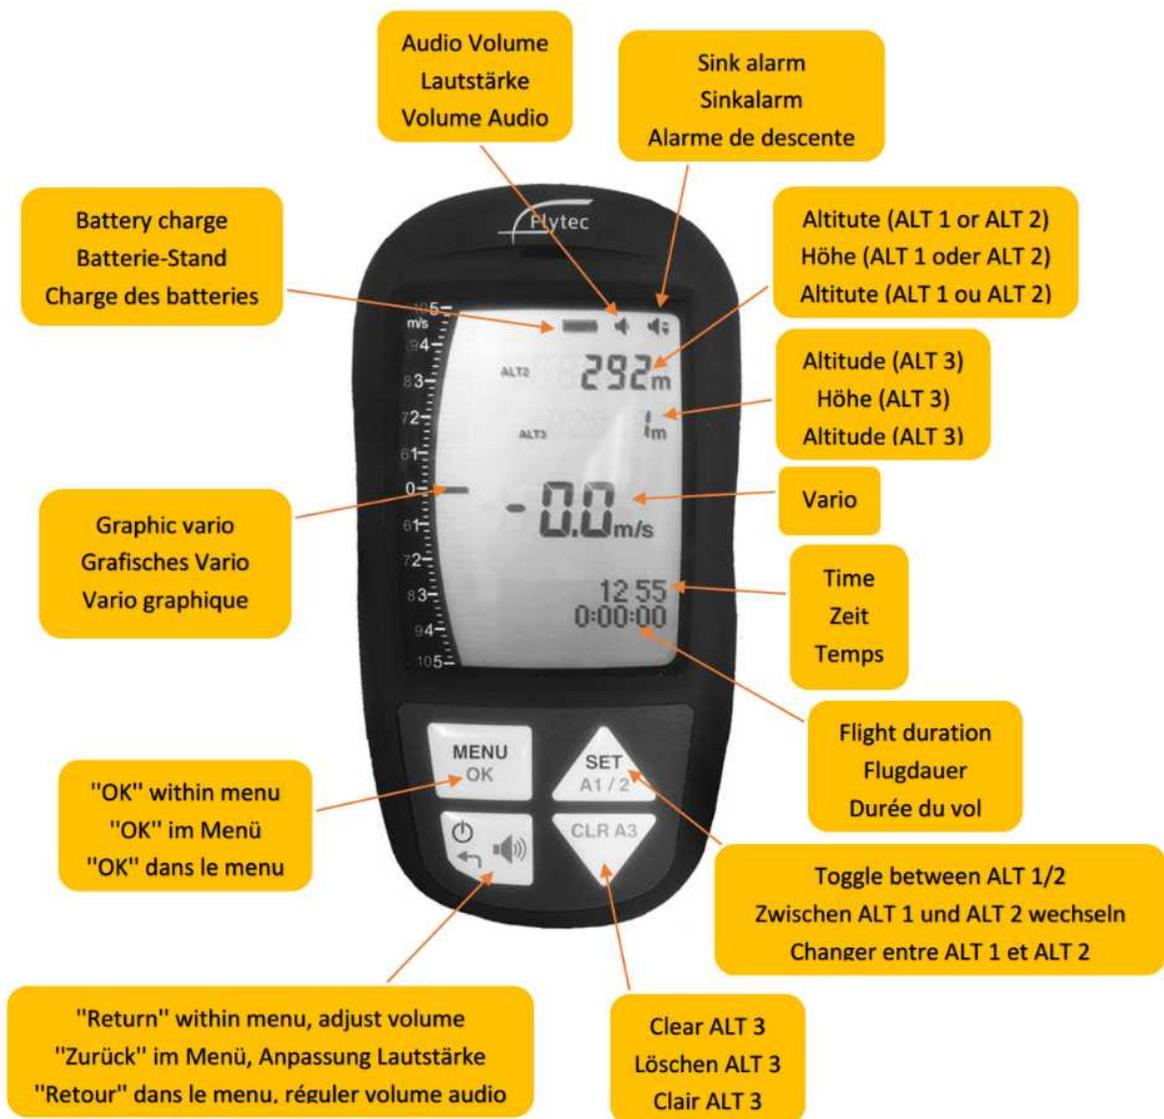


Flight display overview.

For your navigation, icons on the compass rose indicate bearings relative to your direction of flight. Your direction of flight is always at the very top of this display.

4.2 List of indicators

- ALT 1 gives your altitude above Mean Sea Level.
- Ground speed is given in kilometres per hour, knots, or miles per hour.
- The compass rose shows your direction of flight by indicating the relative position of True North with the symbol N. You are always flying toward the top of the compass rose.
- Last thermal shows the relative position of your last climb. If you need to return to that thermal, turn your glider so that the indicator appears at the top of the compass rose.
- The graphic vario shows your vertical speed (climb or sink) in metres per second, ranging from +10 m/s to -10 m/s. You may also choose feet per minute, ranging from +20 fpm x100 to -20 fpm x100.

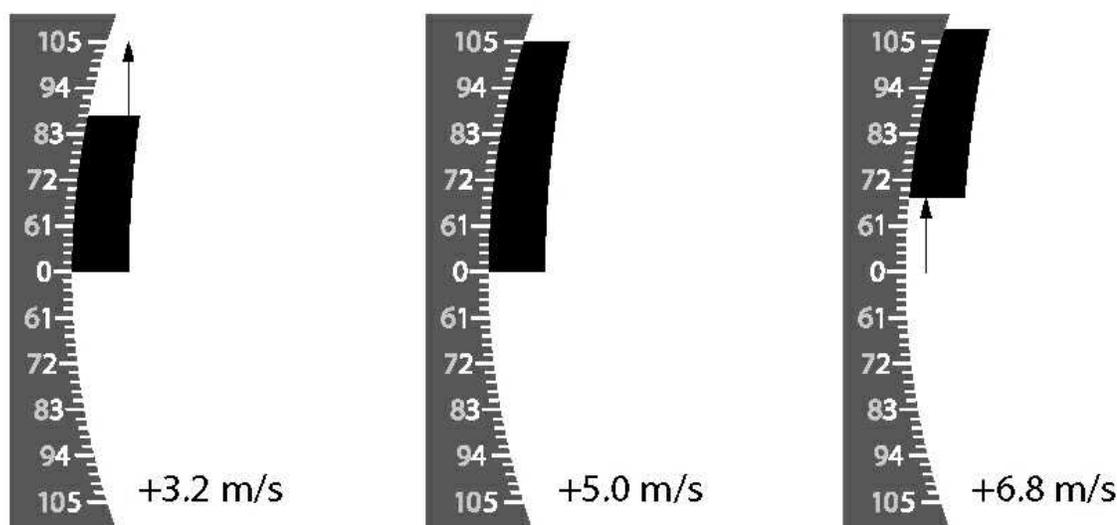

Graphic vario display.


- The integrated vario gives your vertical speed averaged over the last five seconds.
- Wind direction is shown once you have flown a few 360s. Your Element Alto will automatically calculate the wind direction from your drift and show it as a large wind arrow in the compass rose.

Tip: Wind direction is shown on the display as an arrow in the compass rose. When the arrow points up, you have a tailwind. When landing, keep the wind arrow pointing down, that means you are flying into wind.

Note: The Element Alto calculates wind direction and strength by measuring your track over the ground during 360-degree turns and calculating your drift. For the most accurate wind reading, you should fly two or more slow circles, holding constant speed and bank angle.

4.3 Audio volume

In flight you may adjust the audio volume by pressing the loudspeaker key on your keyboard.

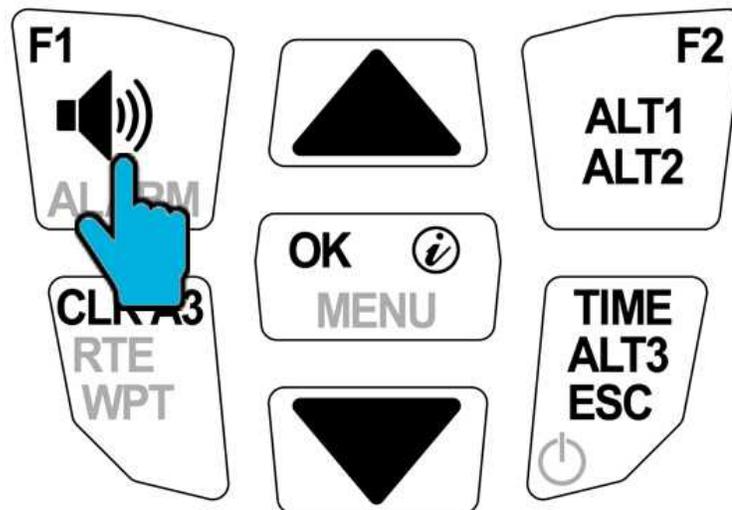


Adjusting audio volume in flight.

4.4 Summary page upon landing


Note that upon landing, your Element Alto will need a few seconds to determine for sure that you've stopped moving. Once it has, it will display a summary of your flight. While the flight summary is displayed, press the on/off button to switch off your Element Alto. The same summary page is presented to you in your flight memory. The flight summary page displays the following information:

- Maximum value of ALT1
- Maximum climb rate of the flight
- Maximum sink rate of the flight
- Total flight time
- Position in Element's memory (most recent flight is always #1)
- Date
- Time of take-off

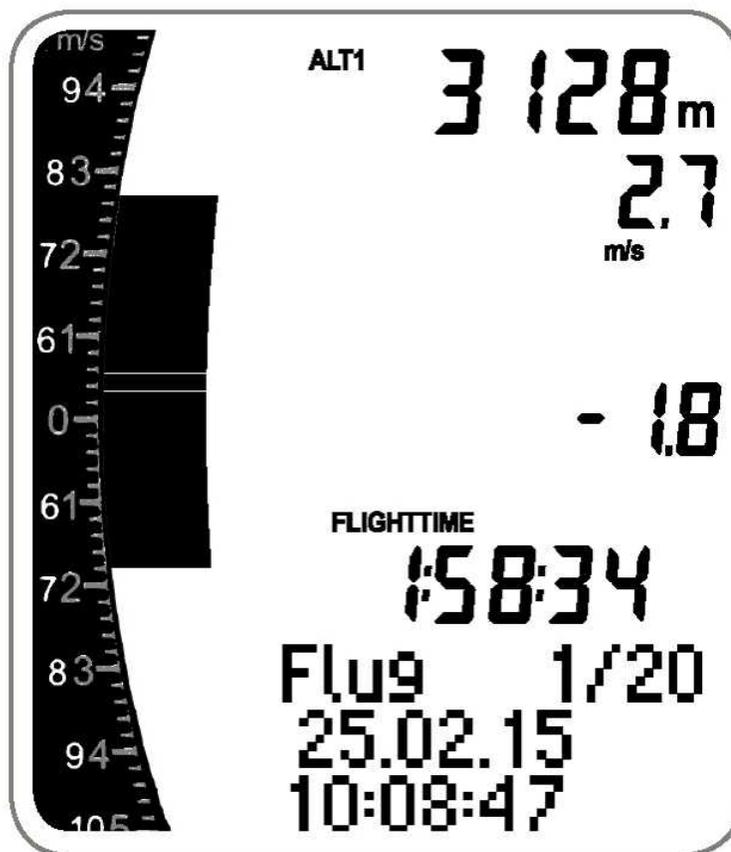

Flight summary page.


Part

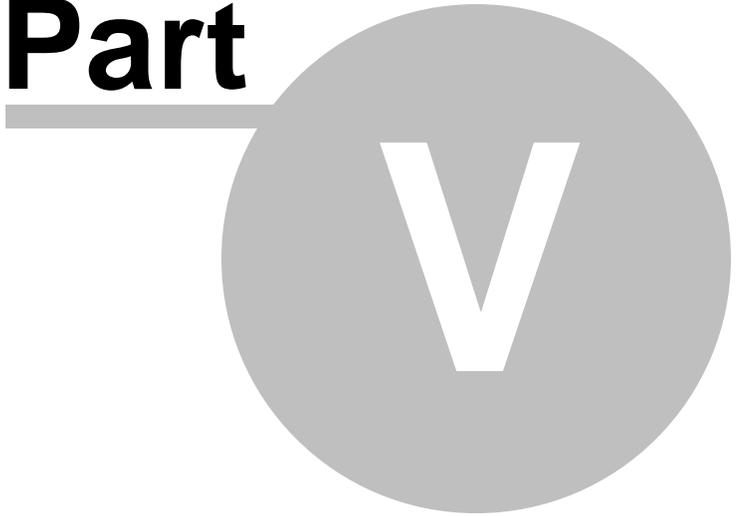

5 Flight analysis


The Element Alto stores 20 flights in its internal memory. Once the 20 are full, each new flight replaces the oldest one in the memory. Every flight is shown as a summary page as shown below and can be accessed as follows:

1. Press and hold MENU.
2. Use the arrow keys to select Flights, press OK.
3. Toggle through your flight summary pages using the arrow keys.

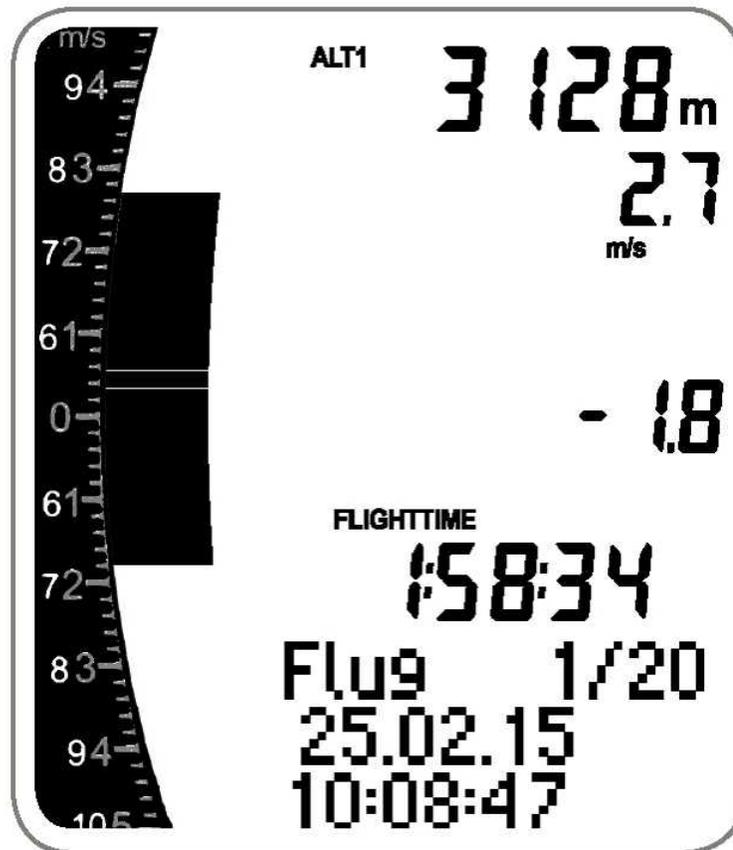

Flight summary page.

Part

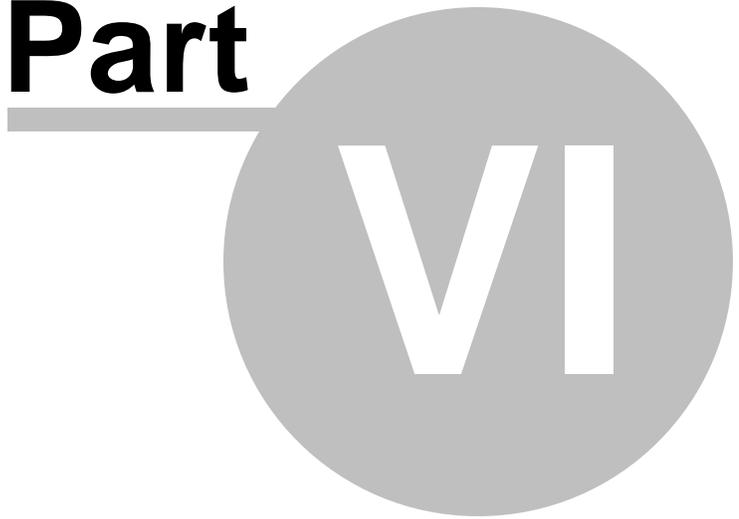

6 Configuration

See the following topics to configure your Element Alto:

- [General settings](#)^[25]: Set your personal preferences, units, time zone, etc.
- [Vario profiles](#)^[26]: Configuring the vario profiles
- [Audio settings](#)^[29]: Additional acoustic settings such as audio mode and frequency

6.1 General settings

For some of these settings you will have to enter text, view the diagram for text entry. All configuration on this page is accessed in the Preferences menu:

1. Press and hold MENU.
2. Use the arrow keys to reach Preferences, press OK.

6.1.1 Time zone (UTC)

You must input your time zone in the form of an offset from Coordinated Universal Time (UTC). To look up your UTC setting, use www.worldtimeserver.com and click on your country and city. When you have selected Time zone in the Menu, you use the arrow keys to set your UTC offset.

6.1.2 Language

Choose between English, German, French, Spanish, and Italian.

6.1.3 Pilot information

Enter your name.

6.1.4 Units of measurement

The Element Alto offers different units of measurement for altimeter, vario, distance, time, speed, and pressure.

6.1.5 Key tone

Set a key tone for the Element Alto. You may choose between off, low, default, and loud. These values are relative to the overall audio volume you have set. Default means that the key tone is set at the same level as your overall audio volume.

6.1.6 Display contrast

Set your display contrast here with a value from -7 to +7 according to your preferences.

6.1.7 Battery type

If you want to change the type of battery used in the Element Alto, see the [Technical notes](#)^[6].

6.1.8 Further customisation

You can customise your Element Alto according to flight type and weather conditions with one of 5 [Vario profiles](#)^[26], additional [Audio settings](#)^[29].

6.2 Vario profiles

To set your vario check following chapters:

- [Profile types](#)^[26]
- [Profile customisation](#)^[26]
- [Profile reset](#)^[28]
- [Vario integration](#)^[29]


6.2.1 Profile types

The Element Alto offers 5 profiles for weak, regular, and strong thermals, for ridge/coastal soaring, and for balloon flights.

1. Press and hold Menu
2. Use the arrow keys to scroll to Vario profiles, press OK
3. With Select you enter the list of profiles, select from weak, regular, strong, soaring, or balloon with OK
4. Return with ←.

6.2.2 Profile customisation

Each profile can be customised to the pilots preference. All values which are changed are saved in that particular profile. In order to edit and profile, it must first be selected as described above. Like most all varios, the Element Alto beeps when you climb and sounds a low tone when you sink. But the vario acoustics are slightly more sophisticated than that. In addition to the familiar climb and sink tones, your Element Alto also features a near-thermal Tone to help you find weak thermals and it can sound a sink tone if you are sinking rapidly.

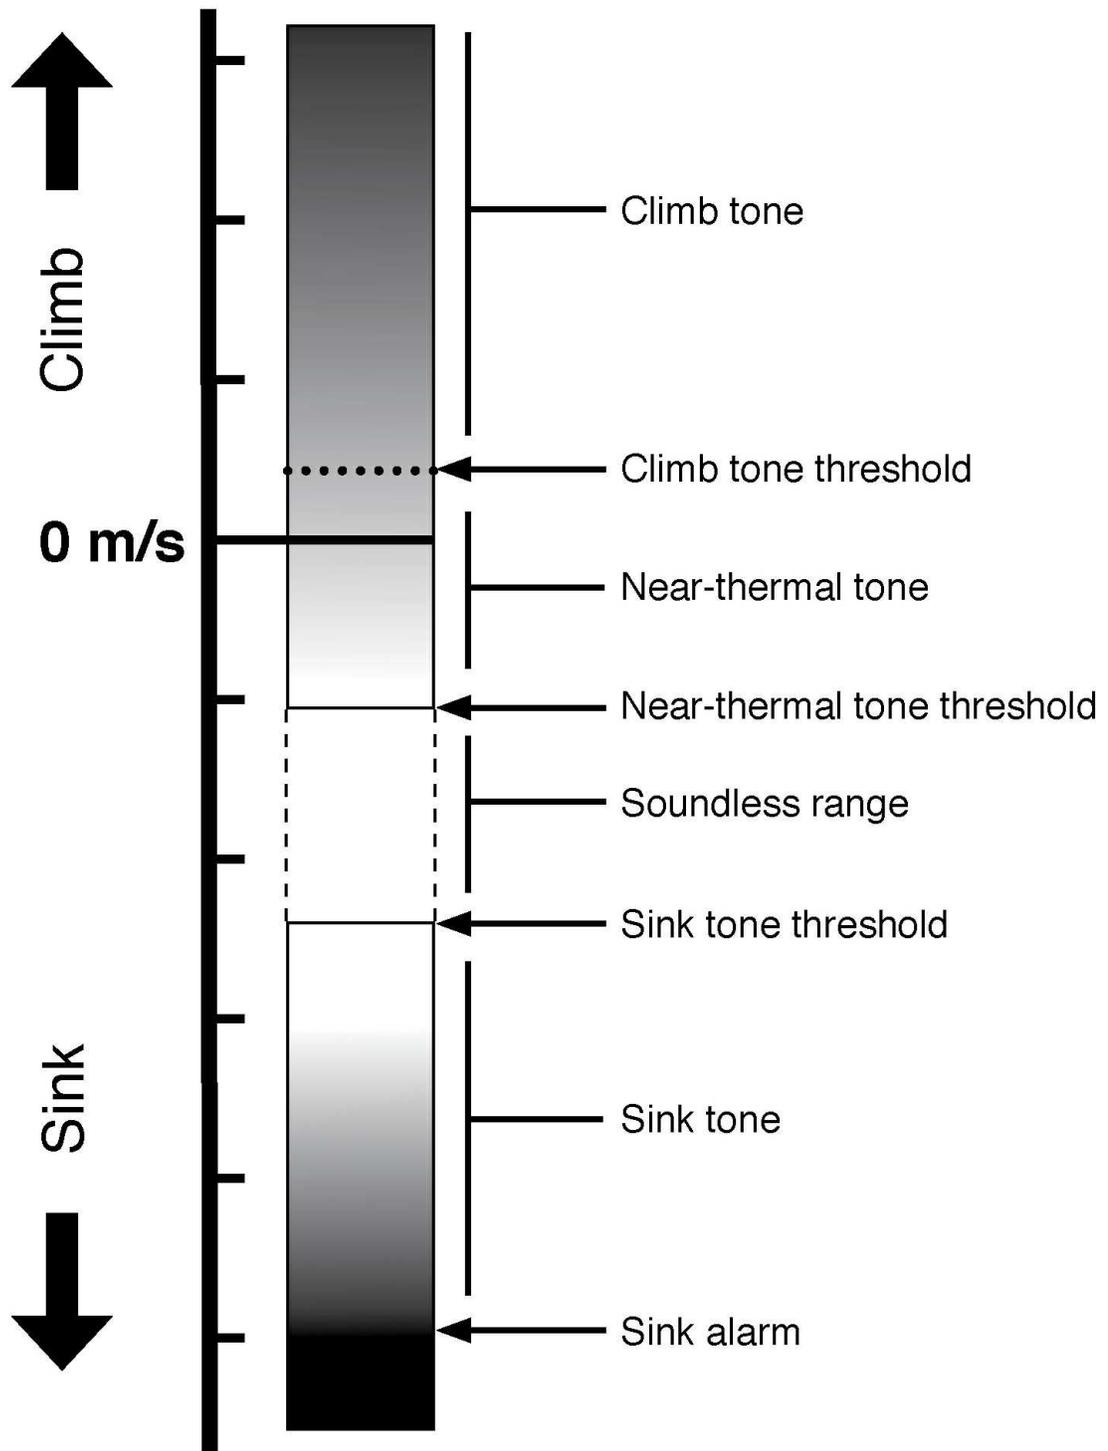

The various tones for the Element vario.

1. Press and hold Menu

2. Use the arrow keys to scroll to Vario profiles, press OK
3. Choose Details to customise the profile you have activated as described above
4. Return with ← .

You may customise:

- *Sensitivity*: Choose from a slow, regular, or fast reaction
- *Audio General*:
 - Tone change: Linear or harmonic. This describes how the vario tone changes with increasing vertical speed. With the setting "linear", the tone frequency goes up linearly with the vertical speed. So the change from 1 m/s to 2 m/s gives the same change in frequency as the change from 5 m/s to 6 m/s. With the setting "harmonic", the change is different. This is because we perceive frequencies differences differently, depending on how high the frequencies are: On a piano, B3 and C4 have 246.942 and 261.626Hz. Difference is 14,684 Hz. If we take it a few octaves higher, B6 and C7 have 1975.53 and 2093.00. Difference is 117,47Hz. To the human ear, the difference is exactly one tone - just a few octaves higher. So with the setting "harmonic", we change the frequency in a way so that a climb frequency of 0.1 m/s will always be perceived as the same tone difference, regardless of the absolute climb values.
 - Tone rise: Off, slow, medium, fast
 - Cadence change: Logarithmic or linear. This describes how the vario cadence (the number of beeps per second) changes with increasing vertical speed. With the setting "linear", the cadence goes up linearly with the vertical speed. So the change from 1 m/s to 2 m/s gives the same change in frequency as the change from 5 m/s to 6 m/s. Because this will make for some very fast, nervous beeping with higher climb rates, we introduced the logarithmic setting. With this, the beeping still gets faster the faster you climb, but it does not increase as much. The change from 1 m/s to 2 m/s is much more than the change from 5 m/s to 6 m/s.
 - Cadence rise: Off, slow, medium, fast
- *Climb tone*:
 - Active: Activate or deactivate the climb tone.
 - Threshold: Set the threshold at which the climb tone sets in.
- *Near-thermal tone*:
 - Active: Activate or deactivate the near-thermal tone.
 - Threshold: Set the threshold at which the near-thermal tone sets in.
 - Duration: Short, long, or constant defines the actual tone length with which you like the near-thermal tone played by the vario.
 - Volume: Off, reduced, default, and loud are values relative to your general audio volume.
- *Sink tone*: The settings here are the same as for the near-thermal tone.
- *Last thermal threshold*: The Element Alto records thermals using readings of its numeric vario. You can adjust the threshold of the last thermal value from between 0.1 to 3.0 m/s (or 0.2 to 6 ft/min x 100). The default setting is 0.5 m/s or (1.0 ft/min x 100).

6.2.3 Profile reset

In order to reset a profile to its original settings, you must first select it as described above, then perform the reset:

1. Press and hold Menu
2. Use the arrow keys to scroll to Vario profile, press OK
3. Select the profile you want to reset
4. Then scroll to Reset profile, press and confirm with OK
5. Cancel with ←.

6.2.4 Vario integration

The vario integration is as such not part of any profile and is therefore set as a global value. This value may be adjusted from 1 to 60 seconds. Though the default setting is 10 seconds, it may be useful to adjust the averaging interval to a longer setting. A good strategy is to set the numeric vario averaging interval to at least the time it takes you to turn a complete circle when thermalling: approximately 15 seconds or longer.

1. Press and hold MENU.
2. Use the arrow keys to select Settings, press OK.
3. Use the arrow keys to select Flight settings, press OK.
4. Use the arrow keys to select Vario integration, press OK.
5. Set the desired integration time.

6.3 Audio settings

Apart from the acoustic settings related to the [Vario profiles](#)²⁶, you can define general audio settings on the Element Alto. All these settings are in the Flight settings menu:

1. Press and hold MENU.
2. Use the arrow keys to select Settings, press OK.
3. Use the arrow keys to scroll to Flight settings, press OK.

6.3.1 Audio Frequency

You can raise or lower the frequency of the lowest climb tone to hear overall higher or lower pitched beeps. The default is 800 Hz.

6.3.2 Audio mode


Choose between two settings:

- Always or
- In flight.

When in the default mode of Always, the Element Alto will emit vario tones whenever it is switched on (and you have the audio volume level above "mute"). It can be inconvenient to hear tones when preparing your gear for flight or if you want to use your Element Alto to record hike-and-fly adventures, for instance, because you won't want to hear vario tones while you walk through nature. Selecting In Flight ensures that the Element Alto will only emit vario tones after it detects your take-off.

When your vario is set to In flight audio mode, you can still get a vario sound by briefly pressing the loudspeaker key. You will have vario sound for the next 20 seconds, then your Element Alto will be silent again until it detects a take-off.


Part

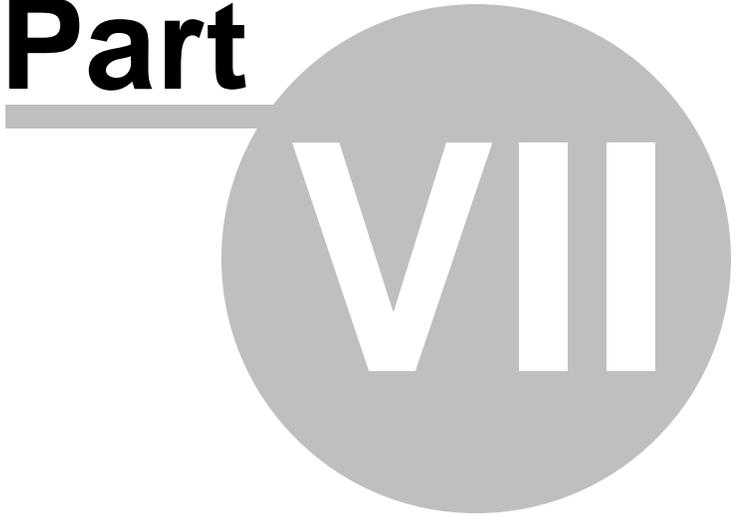

VII

7 Menu tree

Overview of the Element Alto menu, accessible by long press of the Menu key.

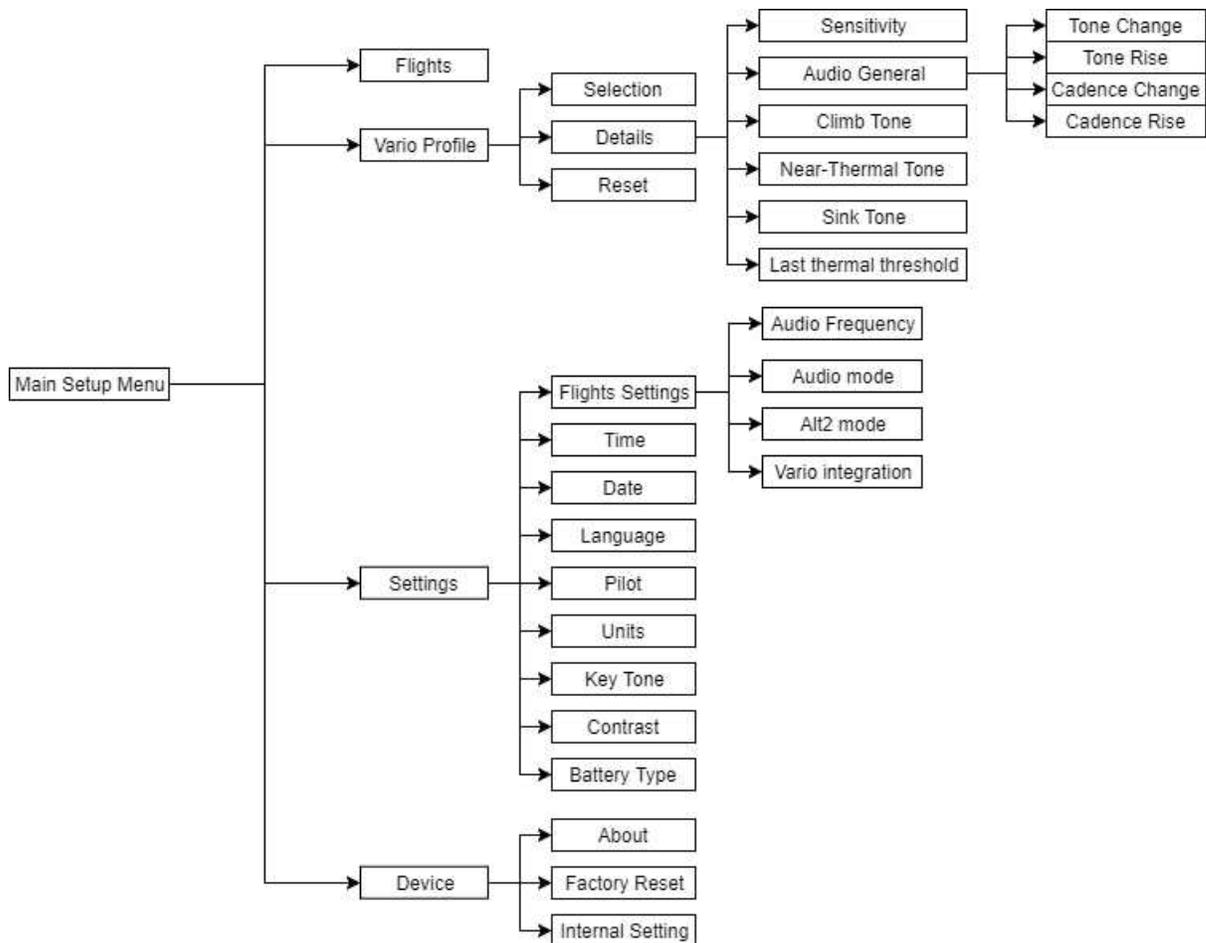

The Element Alto menu tree.


Part



8 Technical specification

| Device | |
|------------------------|--------------------------------|
| Loudspeaker | Yes, buzzer |
| Buttons | Yes |
| Battery | 2x standard AA battery |
| Battery indicator | Yes |
| Battery autonomy | 250h |
| Size | 138x74x21 mm |
| Weight | 182 g |
| Vario | Yes, high sensitivity |
| Pressure altitude | Yes, high precision |
| Flight storage | Yes, statistics for 20 flights |
| Operating Temp. | -15°... +50° |
| Software | |
| Languages | 7 |
| Software updates | Free |
| Units | Metric/Imperial |
| In the box | |
| Element Alto | |
| Protective case | |
| Getting started manual | |


Part

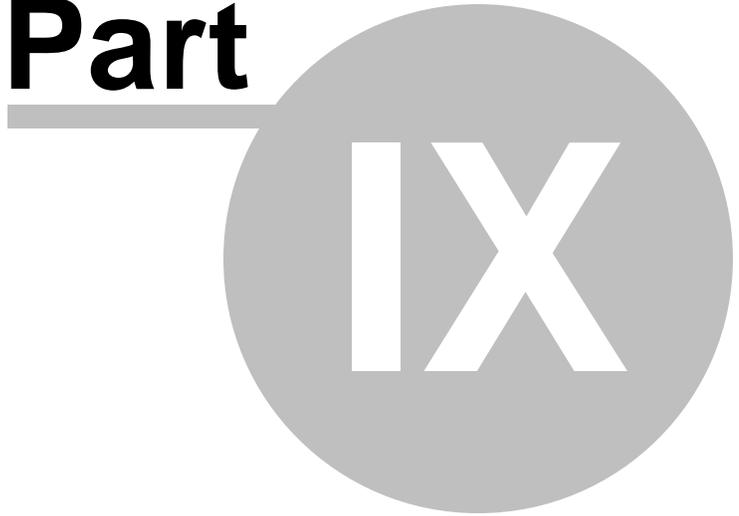

9 Troubleshooting

If you have any question or problems feel free to support@naviter.com

Part

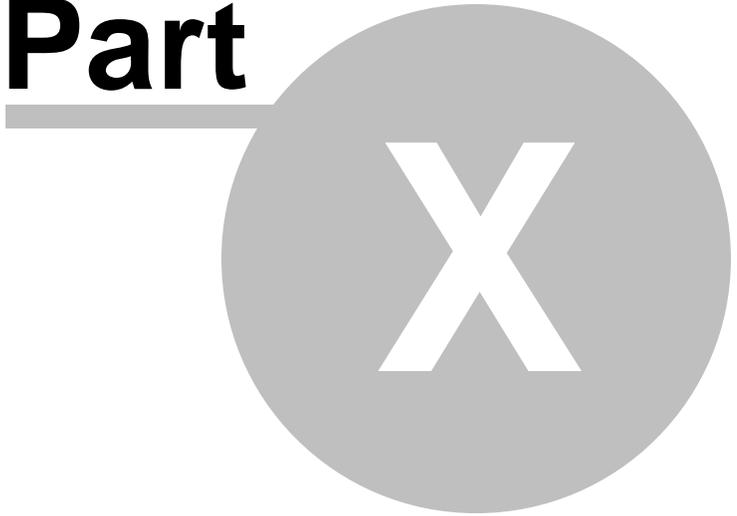


10 Notice of non-liability

This is a personal navigation assistance device only. It is not a replacement for any legally required device, method or service.

Before it is put to use it is the responsibility of any user who will use this device to become familiar with operation and safety aspects of this device. Using the system improperly could cause failure and lead to possible property damage and/or personal injury.

Naviter by Flytec assumes no responsibility for property damage, accidents, injury or death that may result from the misuse of this device/equipment. This includes any use of this device/equipment outside the scope of common sense, the User Manual, inserts and other related documentation.

Part

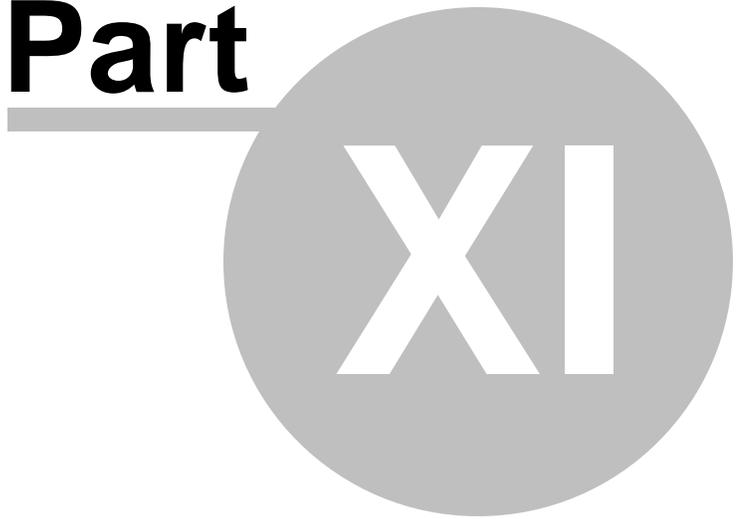

11 Limited Warranty

Naviter company warrants your Element Alto against defects in materials and workmanship for two (2) year from date of purchase invoice. The warranty is non-transferable. Should any part of the Element Alto become defective within the warranty period return the Element Alto with a description of what/why it is not functioning and we will repair or replace it, at our discretion, free of charge (you pay only shipping to Flytec by Naviter).

Return the unit to:

Naviter d.o.o.
Planina 3
4000 Kranj
Slovenia

The warranty is non-transferable and only valid if Naviter determines that the system and its components have not been damaged due to improper use, been submerged in fluids, dismantled or abused. Naviter reserves the right to determine if repairs are to be done under warranty or at a nominal charge. As a proof of activated warranty you must send a copy of the purchase invoice.

Index

- < -

< Prev and Next > 18

- A -

Airspace 9
Airspace warning 9
Alt. Colors 25
Altitude 25
Altitude Colors 25
Animation speed 9
Arrow towards the North 9

- B -

BAD 26

- C -

center 7
Circling North 20
CIT 25
COM 29
Command bar 4, 9

- D -

Default 6
Defaults 25
Details 23
Display Options 4, 7
drag 20

- E -

East Up 20
Esc 18

- F -

FAI Triangle 7

FAI Triangle Assistant 7
Filter 23
Final glide 4
Finish 7
first time 4
Flarm 9
flash 26
flashing 26
Flight properties 4
Flight trace 9
Free FAI 7

- G -

Getting Started 4, 7
Glider 26
Glider position 9
Glideslope indicator 9
Goal Up 20
goto 4, 23
goto dialog 23
GPS 26, 29
green 23

- H -

Hardware 29
Header 4
Header line 9
Heading Up 20

- L -

Landable 23
lift 7

- M -

map 4, 9, 20, 25
Map 1 9
Map 2 9
Map orientation 4, 13, 20
Map view 25
Menu 4, 18
multi 6

- N -

Navboxes 4, 9
Navigation 4
Near Airport 23
Next 19
NMEA 29
North 4, 13
North arrow 4
North Up 20

- O -

Optimization 4

- P -

Pan 13, 20
Pan mode 20
Pause 29
Pocket PC 2
Port settings 29
position 26
Prev 19
profile 6
Profiles 6

- R -

recently used 23
Relative coloring 25
rotate 7, 20

- S -

Save As 25
Scheme 25
SeeYou Mobile 2
Send 29
Settings 25
Show 25
South Up 20
Speed to Fly indicator 9
symbol 26
symbols 4

- T -

Tap 4, 26
Tap and hold 26
Task 4, 9
Terminal 29
Terrain 25
Terrain collision 9
Thermal 7
Thermal Assistant 7
Today screen 4
Track Up 20

- V -

Variometer 29
Vector map 9

- W -

Waypoints 9
West Up 20
Wind 4
Wind vector 9

- Y -

yellow 23

- Z -

Zoom 4